

KENSINGTON DESIGN

HEADBOARD FITTING INSTRUCTIONS

1. SHIFT THE MATTRESS A FEW INCHES AWAY FROM HEADBOARD END
2. PLACE THE HEADBOARD FACE DOWN ON THE BED (FLAT SECTION NEAREST PILLOW END)



3. PLACE THE BATONS IN THE BASE OF THE BED – SCREW WHITE PLASTIC SCREWS UP




4. LIFT HEADBOARD INTO THE GAP THAT YOU HAVE FORMED WITH THE WOODEN BATONS



5. MAKE SURE IT IS CENTRALISED

6. SCREW 2 SCREWS THROUGH THE BATON INTO THE HEADBOARD (USE MANUAL OR ELECTRIC SCREWDRIVER – EASIER WITH ELECTRIC)

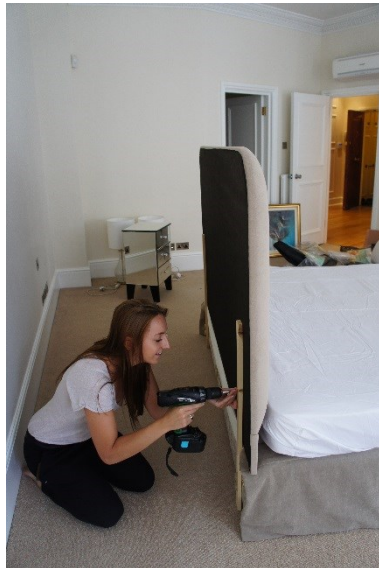



ALL DONE. PUSH BED AND HEADBOARD AGAINST THE WALL.